


Steering Wheel Control Interface for Fiat Vehicles

Allows for the upgrade of the factory stereo to an aftermarket model, whilst retaining factory steering wheel control functionality and phone buttons

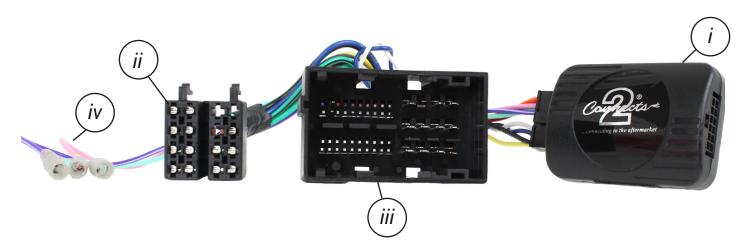

i. Interface Box

ii. Male ISO Connector (16 Pin)

iii. Fiat Vehicle Connector

iv. Flying Wires (Green - Park Brake / Pink - Speed Pulse / Purple/White - Reverse Gear)



APPLICATION .

Note: Application data is subject to change at any time

Fiat 500L 2012> Fiat Doblo 2016>

Fiat Ducato 2015>

Dodge RAM-Promaster 2016

FEATURES.

- Retains Factory Steering Wheel Control Functionality (if vehicle is equipped)
- Retains Phone Button Functionality (if vehicle is equipped)
- Provides Park Brake, Speed Pulse & Reverse Gear Outputs
- **Updateable via USB** (contact supplier for more information)

DISCLAIMER

The information provided in this document is subject to change without notice due to manufacturer changes and/or improvements to the product/s. This instruction manual is based on documented data and research. The manufacturer of this product cannot be held responsible for any changes made to the vehicle by the manufacturer or damages that may occur through the installation of this product in accordance with the steps outlined herein.

PRIOR TO INSTALLATION

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources. Please ensure that the correct tools are using during the installation to avoid damage to the vehicle or product. Connects2 can not be held responsible for the installation of this product.

Setting the Interface Dipswitches

Prior to installation, the circuit board dipswitches must be set to ensure correct operation of the product. To do this, remove the interface box casing and set the dipswitches as follows:

Dipswitch 1 - Set to 'ON' for vehicles with 250VP1 factory stereo, otherwise set to 'OFF' Dipswitch 2 - Set to 'ON' for vehicles with 250VP2 factory stereo, otherwise set to 'OFF' Dipswitch 3 - Set to 'ON' for vehicles with factory Blue&Me system, otherwise set to 'OFF'

Dipswitch 4 - Set to 'ON' if installing a Pioneer stereo. Set to 'OFF' if installing a Sony stereo.

NB: Only change dipswitch positions when interface is disconnected from the vehicle.

WIRING KEY

White

White/Black

IN WIRING HARNESS

Yellow Permanent 12V Purple Right Rear Speaker + Purple/Black Right Rear Speaker -Black Ground **Ignition 12V** Green Left Rear Speaker + Red Green/Black Left Rear Speaker -Orange Illumination Right Front Speaker + Grey Right Front Speaker -Grey/Black

ADDITIONAL CONNECTIONS


Pink Speed Pulse Lt. Green Park Brake Purple/White Reverse Gear


STEERING WHEEL CONTROL FUNCTIONALITY

The following diagram, though based on careful research, is an example only Individual steering wheel control configurations may differ.

Left Front Speaker +

Left Front Speaker -

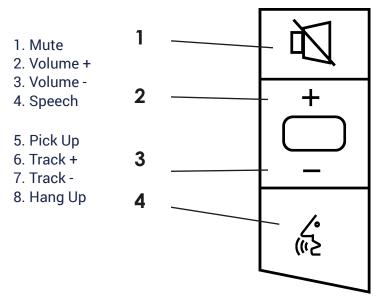

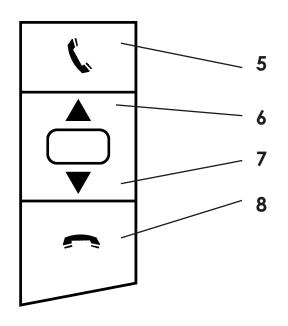

Before installing the interface, the factory stereo must be removed and disconnected. To do this, please consult the vehicle owner's manual/handbook or contact a fitting professional.

A stereo connection (patch) lead is also required for the installation of this interface (supplied seperately). Please ensure that you have the correct lead before proceeding. For universal patch leads, prepare the wiring loops in accordance with the instruction manual supplied with the product before installation.

1. Connect the 12 Pin connector from the stereo connection (patch) lead to the interface box (i)



2. Connect the opposite end of the stereo connection (patch) lead to the steering wheel control input on the back of the aftermarket stereo

NOTE: This may be a 3.5mm jack connector or a wired input depending on the brand of aftermarket stereo being fitted. Please consult the aftermarket stereo installation manual for further information on where to make the connection

- IMPORTANT: THIS STEP MUST BE COMPLETED BEFORE CONNECTING POWER TO THE INTERFACE. FAILURE TO DO SO MAY RESULT IN A LACK OF FUNCTIONALITY AND THE NEED TO REINSTALL THE **PRODUCT**
- 3. Connect the 14 Pin connector from the supplied wiring loom to the interface box (i)
- 4. Connect the male power/speaker ISO connector to the female power/speaker ISO connector from the aftermarket stereo. (jj)

NOTE: For aftermarket stereos which do not have an ISO connector, please see "Wiring Key" on Pg.2 for information on which wires to connect. Some interfaces may also have additional 'flying' wires which can be connected to the vehicle to support various features ie. parking brake trigger, reverse gear and speed pulse. Details of these can be found under 'Additional Connections'.

- 5. Connect the female vehicle specific connector/s on the supplied harness to the male vehicle specific connector from the vehicle. Please refer to wiring diagram on Pg.4, or cover photo on Pg.1 for more information on the connector style of this interface. Common styles include Mini ISO or Quadlock. (iji)
- 6. Test stereo and steering wheel control functionality for correct operation before reassembling the vehicle dashboard. If steering wheel control functions are unresponsive, please uninstall the interface and wiring and reinstall carefully in accordance with the above steps.

For further help and support, please contact us directly at support.connects2.com/tickets/technical and fill out a support ticket with the full details of your issue.

TOWARDS VEHICLE

TOWARDS STEREO

