


- 1. Check the fitment of the part with the bumper.
- 2. Attach the splitter to the bumper with a few screws to keep it sticking to the bumper.
- 3. Disassemble the bumper with the splitter.





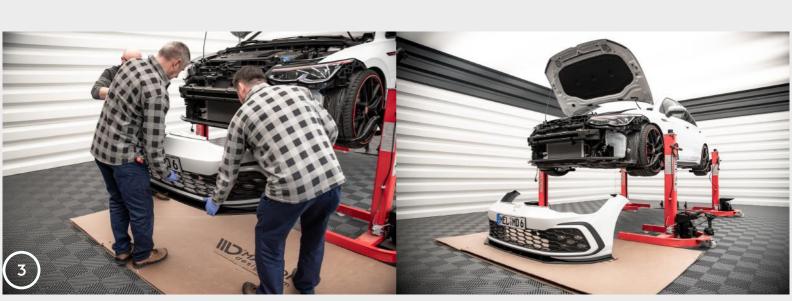



 
More installation manuals on our website: www.maxtondesign.com/manuals





with the splitter holes.







- maxtondesign_official 4. Drill the bumper in places consistent
- 5. Place the bolts in the holes with the head from the ground side, with the thread from the inside of the bumper. When the splitter is attached with a few bolts, remove the screws (shown in step 2)
- 6. Tighten all bolts firmly (20 pieces).
- 7. After installing the splitter, reinstall the bumper to the car.



