

Remove hazard light switch from OEM panel



Installation Manual INE-W928R Kit

• Nissan Qashqai

colour / part-no.: black / KIT-8QQ2



10. Remove air vents



11. Mount metal frames to Alpine INE-W928R

Connect all required circuit points and fix Alpine INE-W928R on dashboard


Mount hazard light switch and air vents to new facia plate

Place facia plate on dashboard

Re-install everything in reverse order to finish installation

Compatible with these Alpine navigation devices

INE-W928R

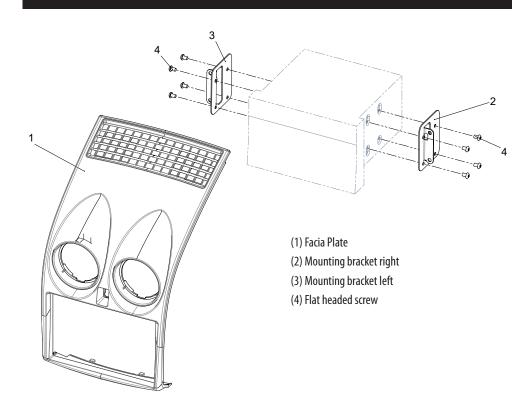

All installation work must be performed by a qualified professional installer only. The manufacturer / dealer is not liable for any kind of incidential or indirect damages.



1. Nissan Qashquai OEM Dashboard



4. Unclip and remove OEM panel



6. Remove 4 screws



2. Unclip panel (see arrows)



7. Remove OEM head unit



3. Remove panel



8 . Cut away plastic to clear space for for Alpine INE-W928R