




FIAT GRANDE PUNTO UNDERBODY BRACES INSTALLATION GUIDE

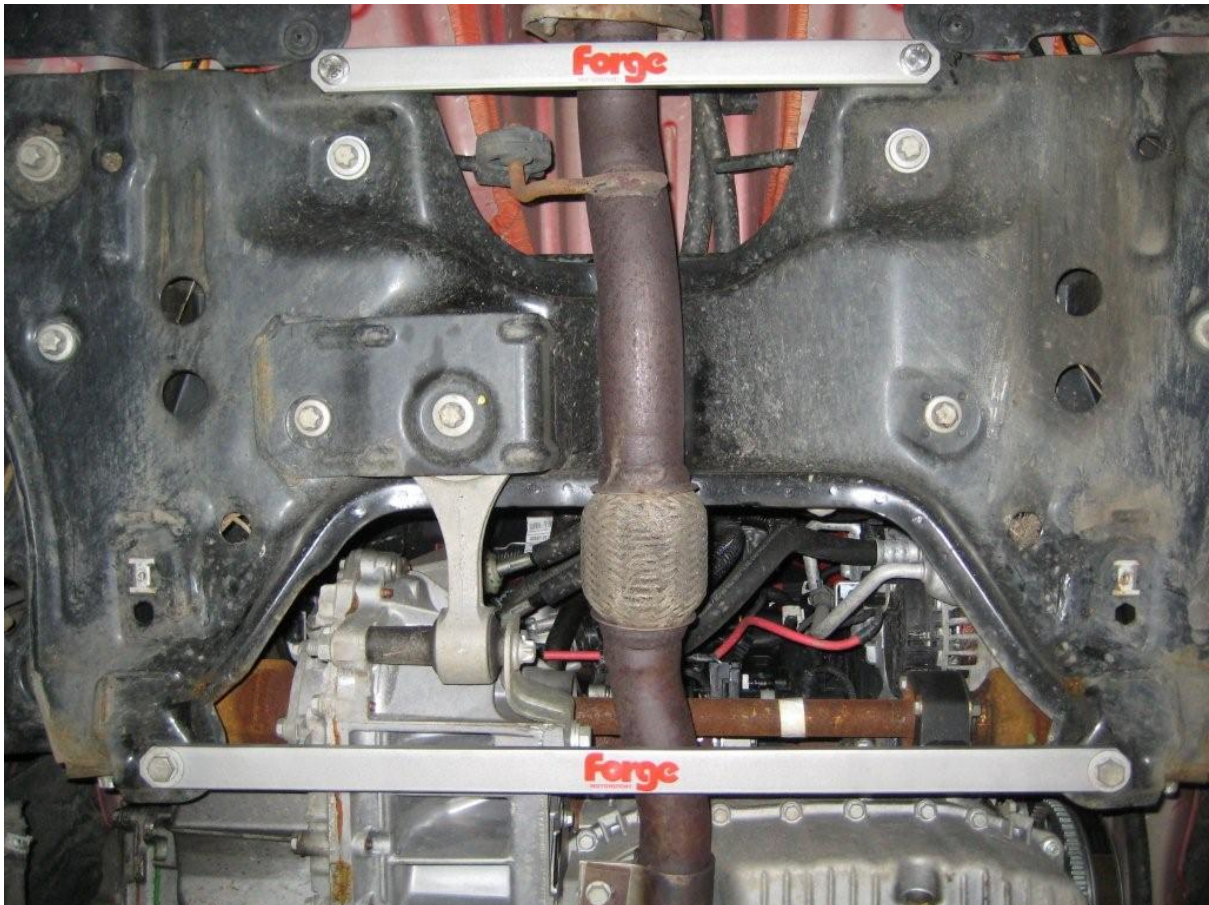


Tools needed:

16mm socket and ratchet / 16mm spanner

T25 Torx bit/screwdriver

Ramps or axle stands and jack

17mm spanner and 17mm socket


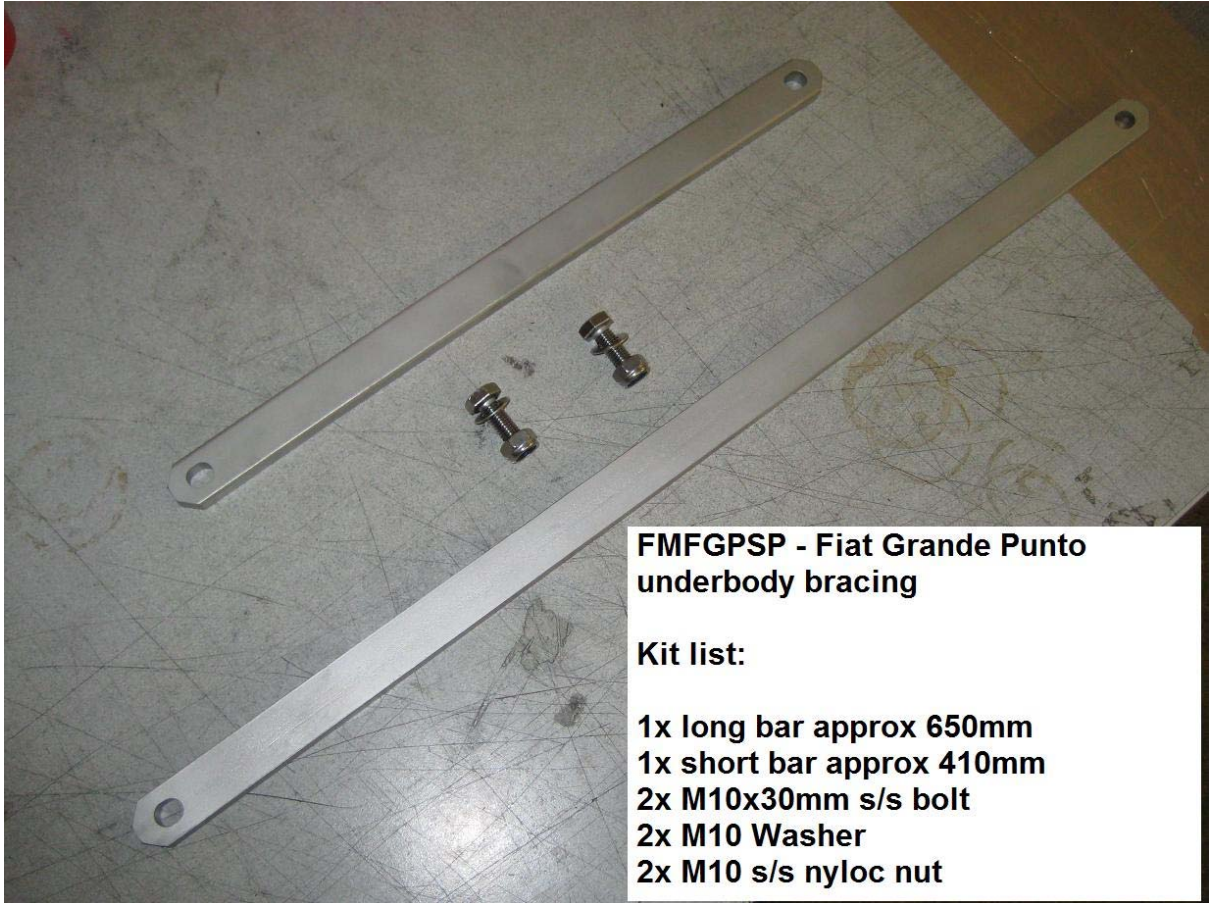


**FMFGPSP - Fiat Grande Punto
underbody bracing**

Kit list:

- 1x long bar approx 650mm**
- 1x short bar approx 410mm**
- 2x M10x30mm s/s bolt**
- 2x M10 Washer**
- 2x M10 s/s nyloc nut**

1. Raise the front of the car in the air in such a way that you can access the rear of the undertray i.e. in line with the wheels, and secure the car so that it can't move. Remove the two T25 screws from the back of the undertray on each side.

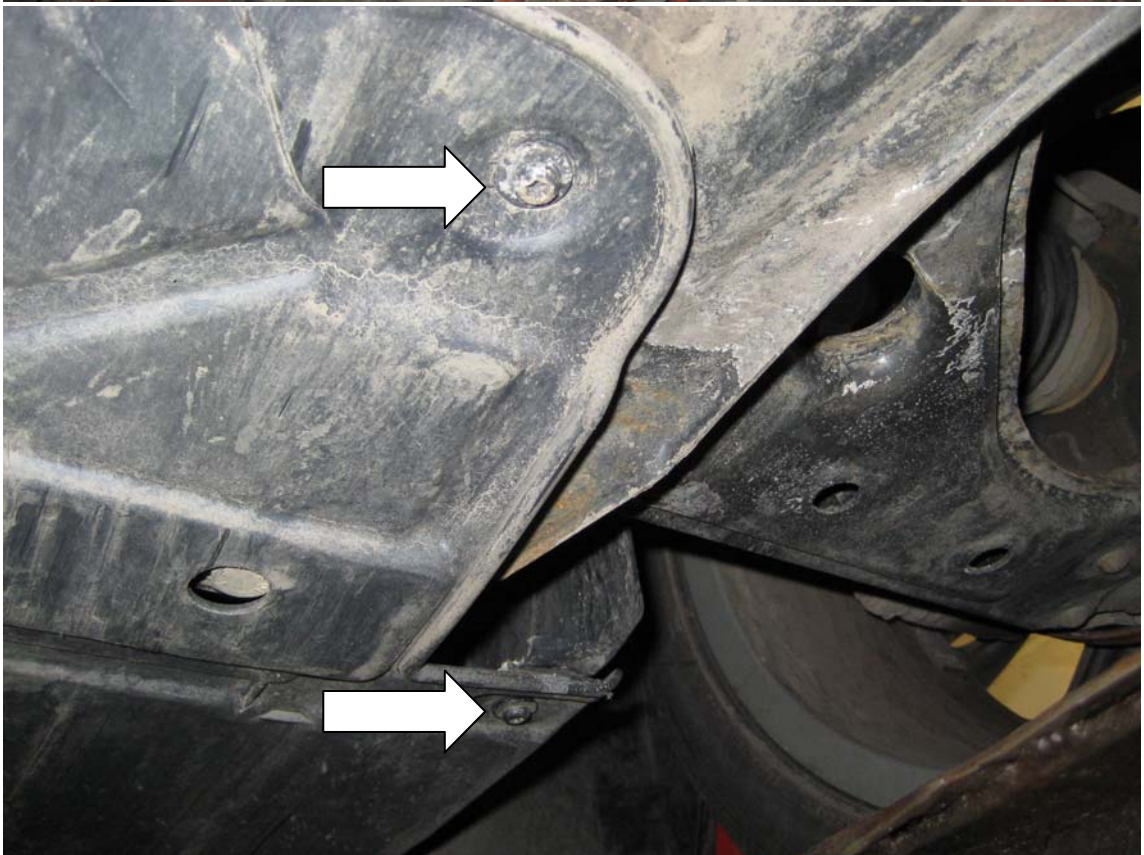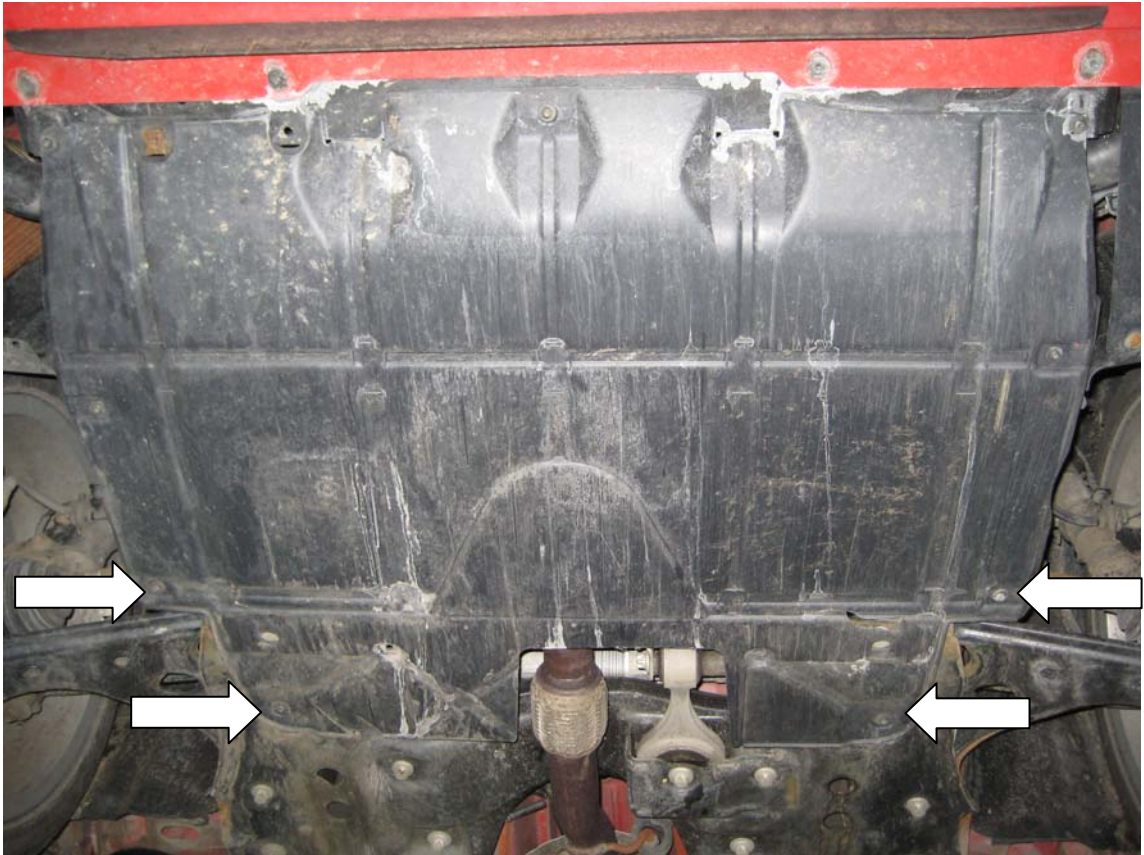


2. With the screws removed, you can pull down the rear of the undertray and expose the thin metal bar the stops the exhaust from hitting the undertray. Remove the two 16mm head bolts and remove the bar.



3. The old bar can be discarded, but we will reuse the bolts. Using the longer of the two Forge bars supplied, fix it to the car in place of the old thin bar, using the 16mm bolts.



- Using the supplied 17mm headed bolt, washer and locknut, fix the shorter of the two bars to the rear of the subframe in two unused holes, just in front of the exhaust joiner.

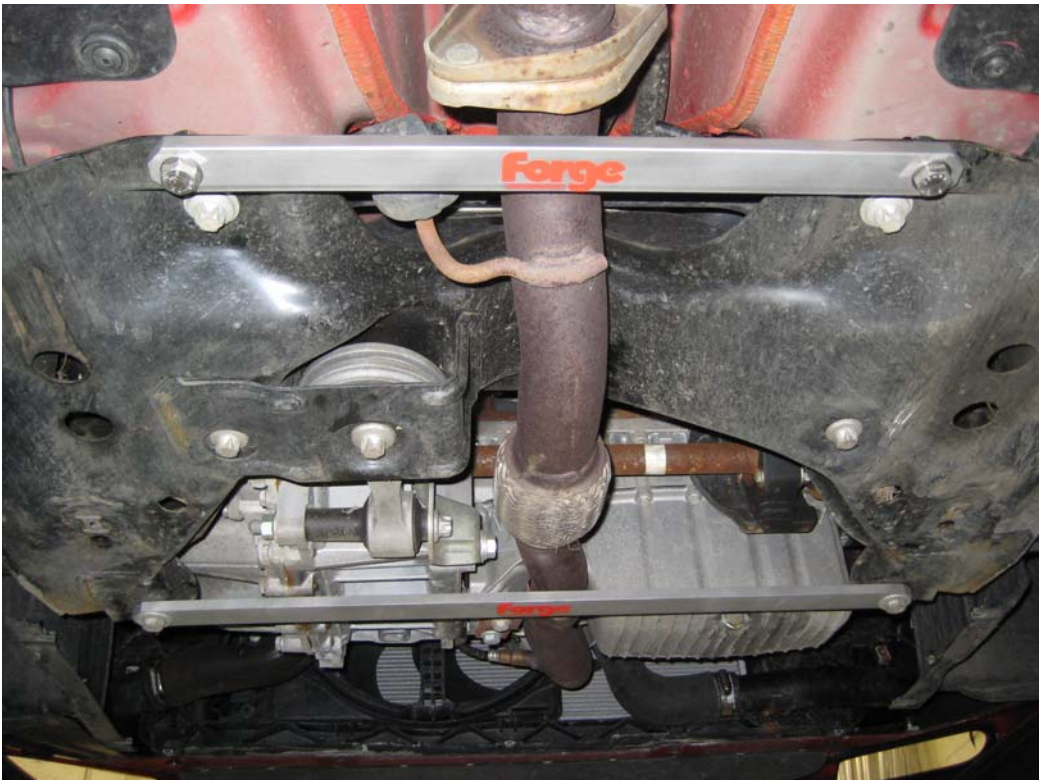

- Installation is complete. Make sure all the bolts are tight, refit the undertray and lower the car to the ground.

ENGINEERED FOR PERFORMANCE