



MERCEDES A45 AMG ADAPTER & AIR  
FILTER INSTALLATION  
INSTRUCTIONS.




Tools required:

- 7mm Hose clamp driver or Flat blade screwdriver.
- T25 Torx driver.
- 3mm Allen key driver.



Engineered for performance

1. To avoid injury, allow the vehicle to cool down fully before starting this installation.
2. Using a T25 Torx driver undo 4x screws and remove the airbox lid. Undo 1x hose clamp.
3. Remove the standard airfilter and disconnect the wiring to the MAP sensor. Clip ECU from the back of the airbox and unclip the air scoop at the front of the airbox. Pull the lower airbox tray firmly upward to remove it from the

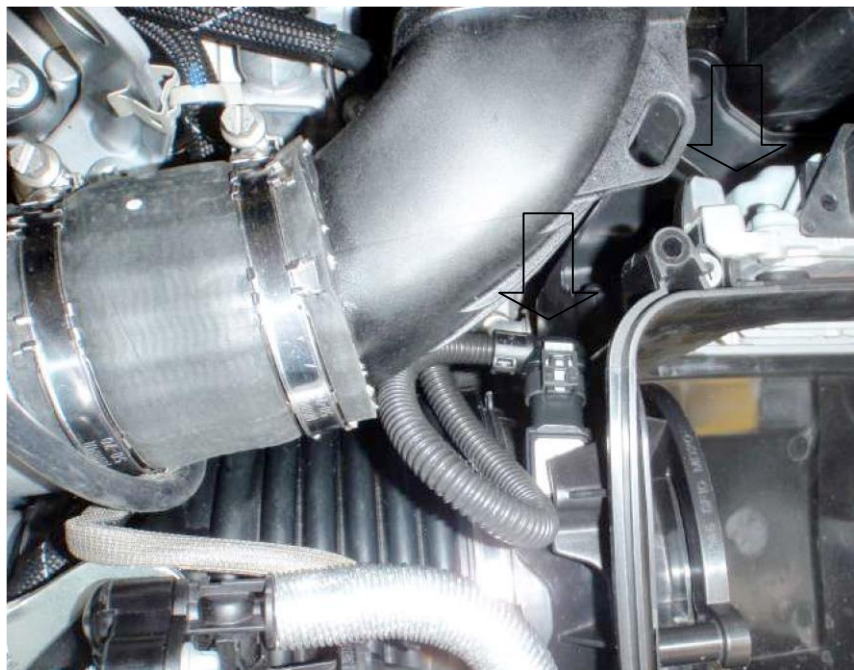

4. Using a T25 Torx driver remove the 3x screws and remove the standard airfilter adapter from the airbox.
5. Fit the MAP sensor to the Forge airfilter adapter. Install the adapter in the OEM airbox and

secure with 3x M5 Allen caps supplied.



6. Refit the lower airbox tray and filter assembly. Reconnect the turbo intake hose and secure with the OEM hose



7. Your installation is now complete.

For a full range of performance products for your vehicle.

**Engineered for performance**

As always, with any questions or concerns about this product or anything else, please feel free to contact your local or preferred Forge Motorsport Dealer/ Installer

Engineered for performance