


| | | | |
|--------------|---|-----------------|----------------------|
| Car | BMW M135i F20/21 including XDrive | Part No. | SBMP105 |
| Year | 2012-2016 | Fit Kits | 362FK |
| Notes | Cut the original exhaust either side of the resonator, deburr the edges and replace with the Scorpion pipe. | Features | Pipe Diameter:- 80mm |

Estimated Fitting Time: 1 Hour

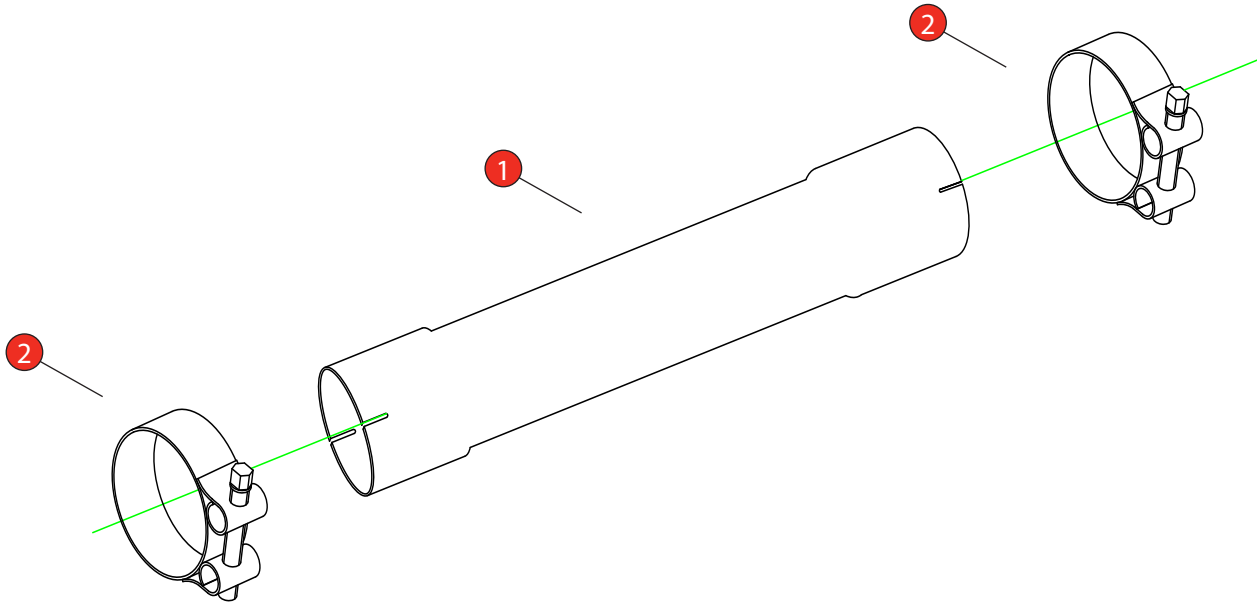

| NO. | PART NO. | DESCRIPTION | QTY |
|----------------|------------|---------------------|-----|
| 1 | 965BM | OE Resonator Delete | 1 |
| Fit Kit | | | |
| 2 | Z016.10069 | 79 - 85mm Clamp | 2 |

| | |
|------------|------------|
| DATE | 20/11/2024 |
| ISSUE | 00 |
| AUTHORISED | S Shipley |

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.



STAY CONNECTED TO RED POWER.