




...connecting to the aftermarket

CT23SY09

Ssangyong Double DIN Fitting Kit

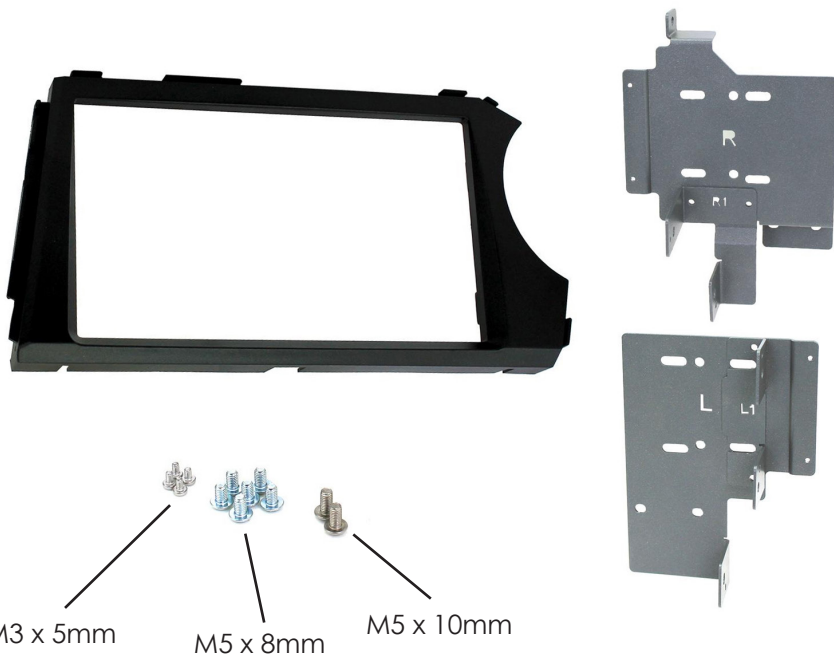

Application:

Korando Sports 2012>

For Right Hand Drive Vehicles Only

www.connects2.com

Designed and
Engineered
in the UK.



ABOUT THIS PRODUCT...

CT23SY09

Ssangyong Double DIN Fitting Kit for Korando Sport 2012> vehicles with right hand drive configuration. Finished in black to match the vehicle dashboard

Product Contents

1. Double DIN Fascia Panel
2. Right Bracket
3. Left Bracket
4. (6x) M5 x 8mm Screw
5. (2x) M5 x 10mm Screw
6. (4x) M3 x 5mm Screw

NB: It is very important that the 8mm and 10mm screws are attached to the correct bracket during installation. Please see Step 2. for more information

Prior to installation

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources. Please ensure you use the correct tools to avoid damage to the vehicle or product.

Connects2 can not be held responsible for the installation of this product.

Technical Support

Connects2 want to provide a fast and suitable resolution should you encounter any technical issues. With this in mind, when contacting Connects2, try to provide as much Information as possible. This will speed up the process and help us to help you.

Please use our dedicated online technical support centre: support.connects2.com



Subscribe to our YouTube Channel for installation guides and tips... www.youtube.com/connects2

FITTING GUIDE

1. Remove the original radio using a Panel Removal Tool and screwdriver







2. Attach the new brackets (2 & 3) to the aftermarket radio as shown in the image.

WARNING: There are two sizes of bracket screws included in the kit, 8mm and 10mm. These must be fitted to the correct brackets and in the correct positions in order to prevent irreparable damage to the aftermarket radio.

Attach the 10mm screws (Item 5) to the Front Slots of the Left Bracket (Item 3) and the 8mm screws (Item 4) to all slots of the Right Bracket (Item 2) and the Rear Slots of the Left Bracket (Item 3) only.


NB: The 10mm screws on the left bracket must be placed as shown (circled), otherwise damage will occur to the stereo

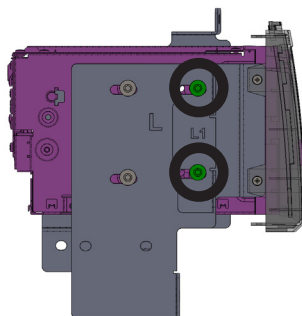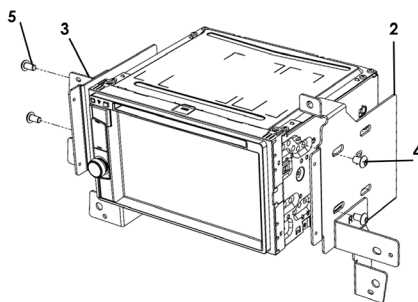

3. Surround the radio/bracket assembly with the new fascia panel and screw into place using the included Pan/Pozi screws (6)

4. Place the radio, fascia and bracket assembly into the dash and screw into place using the OEM screws removed during disassembly

5. Reinstall the dashboard in reverse order of disassembly to complete your installation

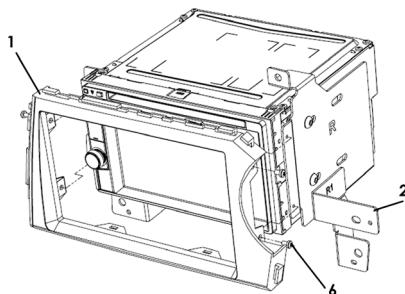

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.