




CT23VX11

Double DIN Fitting Kit for Vauxhall/Opel Vehicles

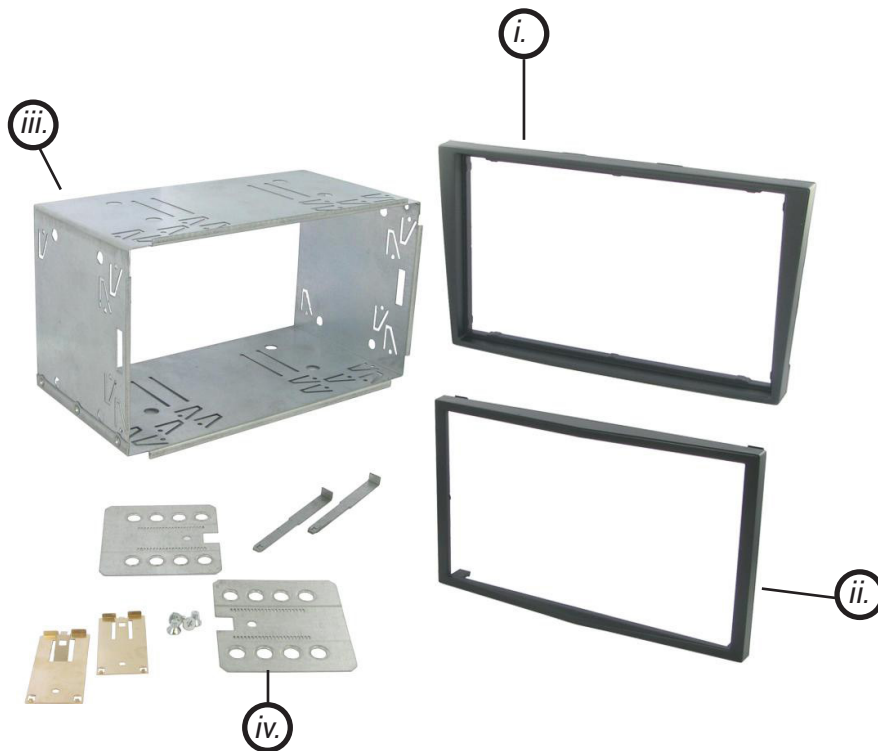

IN THE KIT

- i. Double DIN Fascia Panel
- ii. Trim Panel
- iii. Stereo Cage
- iv. Brackets/Fitting Accessories

APPLICATION

Note: Application data is subject to change at any time

Combo (C)	2001 - 2011	Vectra (C)	2002 - 2008
Corsa (C)	2000 - 2006	Vivaro (A)	2001 - 2010
Meriva (A)	2005 - 2010	Tigra (B)	2004 - 2009
Omega (B)	2000 - 2003	Agila (A)	2000 - 2004
Signum (C)	2002 - 2008		

FEATURES

- Allows for the installation of a double DIN aftermarket stereo
- Includes mounting brackets and fitting accessories
- Finished in metallic charcoal to match vehicle dashboard

DISCLAIMER

The information provided in this document is subject to change without notice due to manufacturer changes and/or improvements to the product/s. This instruction manual is based on documented data and research. The manufacturer of this product cannot be held responsible for any changes made to the vehicle by the manufacturer or damages that may occur through the installation of this product in accordance with the steps outlined herein.

PRIOR TO INSTALLATION

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources. Please ensure that the correct tools are using during the installation to avoid damage to the vehicle or product. Connects2 can not be held responsible for the installation of this product.

INSTALLATION GUIDE



Vauxhall/Opel OEM dashboard. Ensure that the ignition is switched off before starting the installation. We also recommend that the battery is disconnected to prevent short circuits.




Remove the factory radio using two pairs of release keys. Push the keys into the four holes surrounding the unit to disengage the locking mechanism and remove the radio.




Unplug and remove the radio, taking care to remove all wiring.



Push the metal cage into the dashboard cavity left by the factory radio

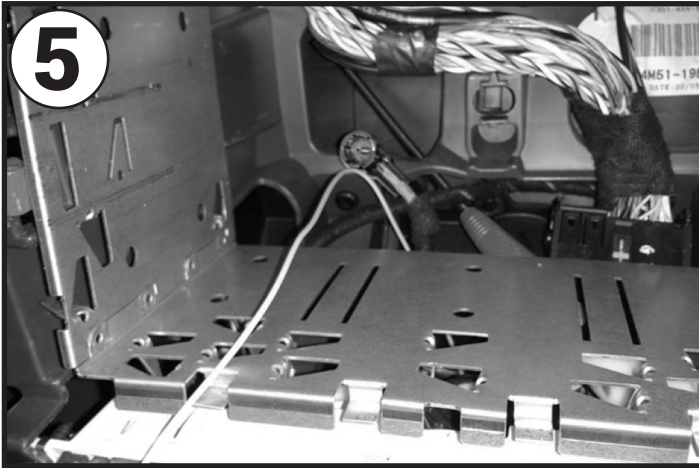

Push the metal clips on the inside of the metal cage inwards to secure the cage in the cavity

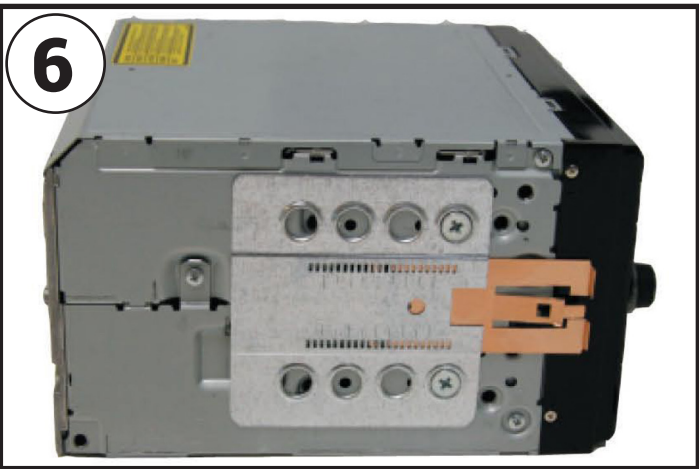

Attach the right and left brackets to the sides of the aftermarket radio. Use the gold spacers to ensure that the brackets are correctly aligned on each side.



Place the aftermarket radio into the dashboard until it clips into the metal cage. Ensure that all relevant wiring is reconnected to the new radio.

Place the fascia panel and trim panel around the radio and push into place to complete the installation.

