




VW

T5.2 Oil Cooler Instructions

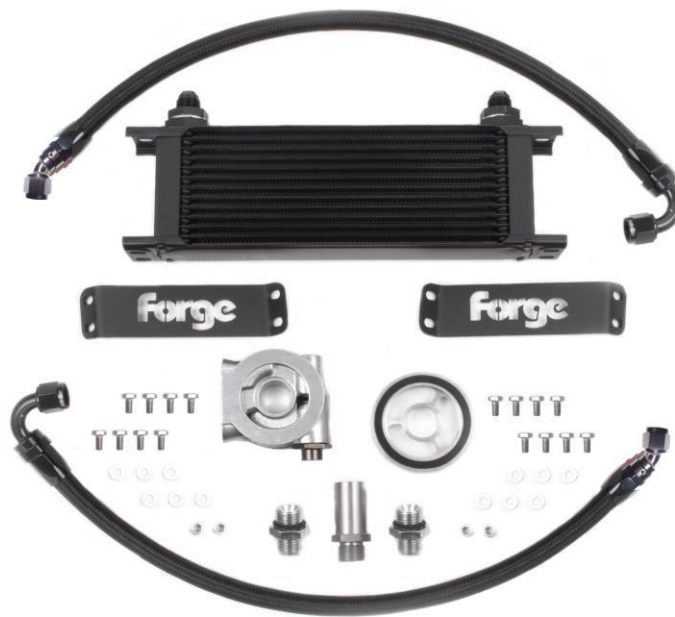


Tools Required:

- Oil filter removing tool
- Adjustable spanners
- 10mm socket and ratchet
- 10mm spanner
- 1" socket, long extension and ratchet

Please thoroughly read through and familiarise yourself with these instructions in their entirety prior to beginning any part of the installation process of any component. Please also ensure the vehicle and engine has cooled down sufficiently to avoid risking possible skin burns or other injury.


1. Having installed your forge motorsport intercooler before replacing the bumper, drain oil and remove oil filter. Bolt on the oil cooler with brackets, nuts, washers and bolts supplied in the kit.

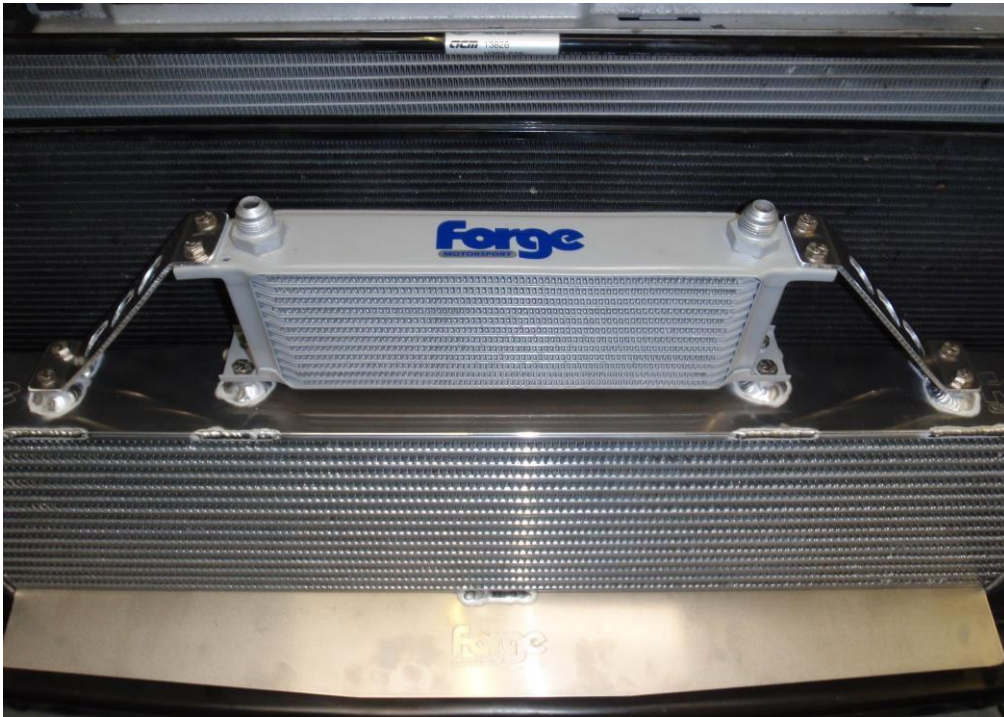


2. Assemble the oil take off plate with the AN fittings angled in together but with a small gap between and tighten. Place spacer and O ring on the bottom and threaded extension through the middle.




3. Place the spacer plate assembly where the oil filter screws on, tighten TO 30-35LBFT in position shown below making sure there is clearance all around and then replace oil filter.

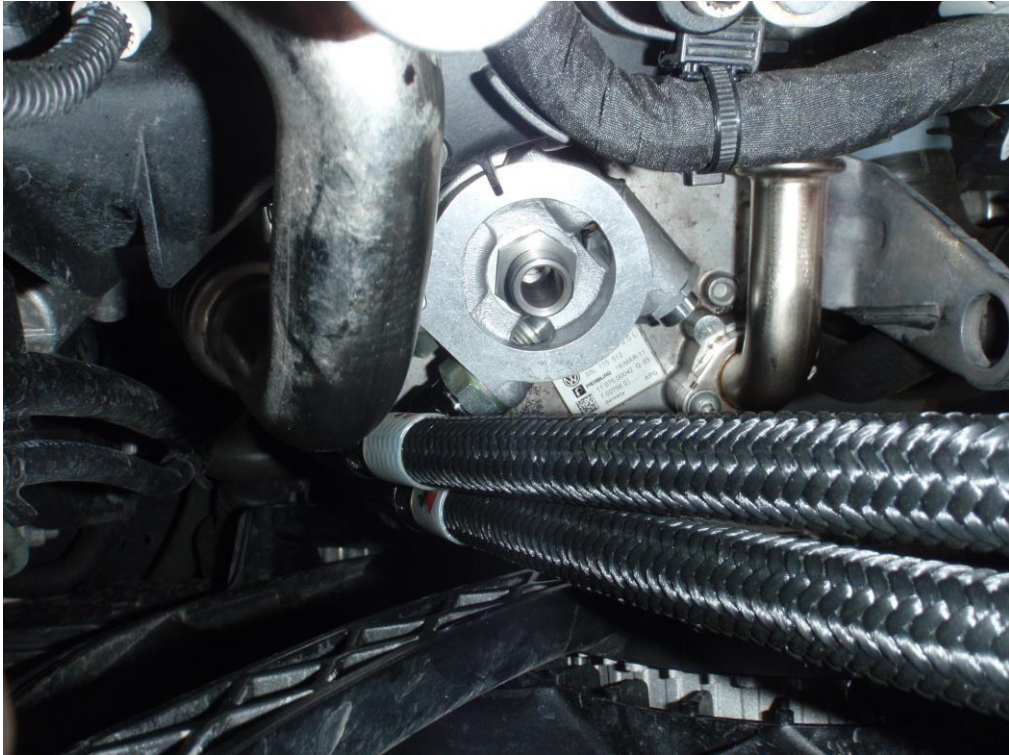

4. Feed the braided hoses through the radiator pack as shown below screw on the NA dash fittings and tighten. Please refer to the intercooler instructions to replace bumper.

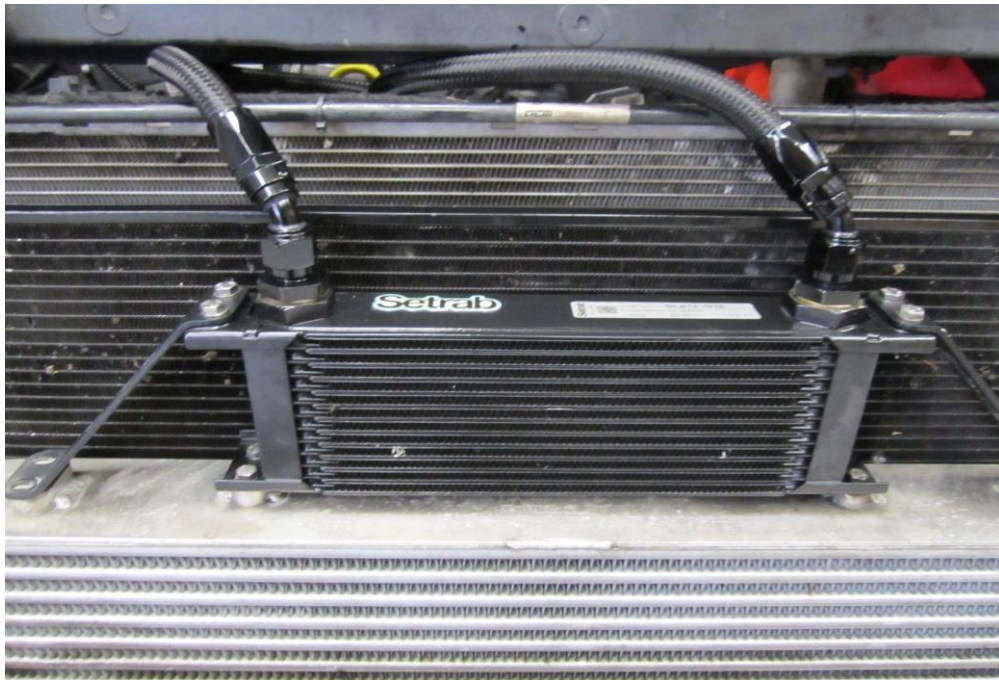

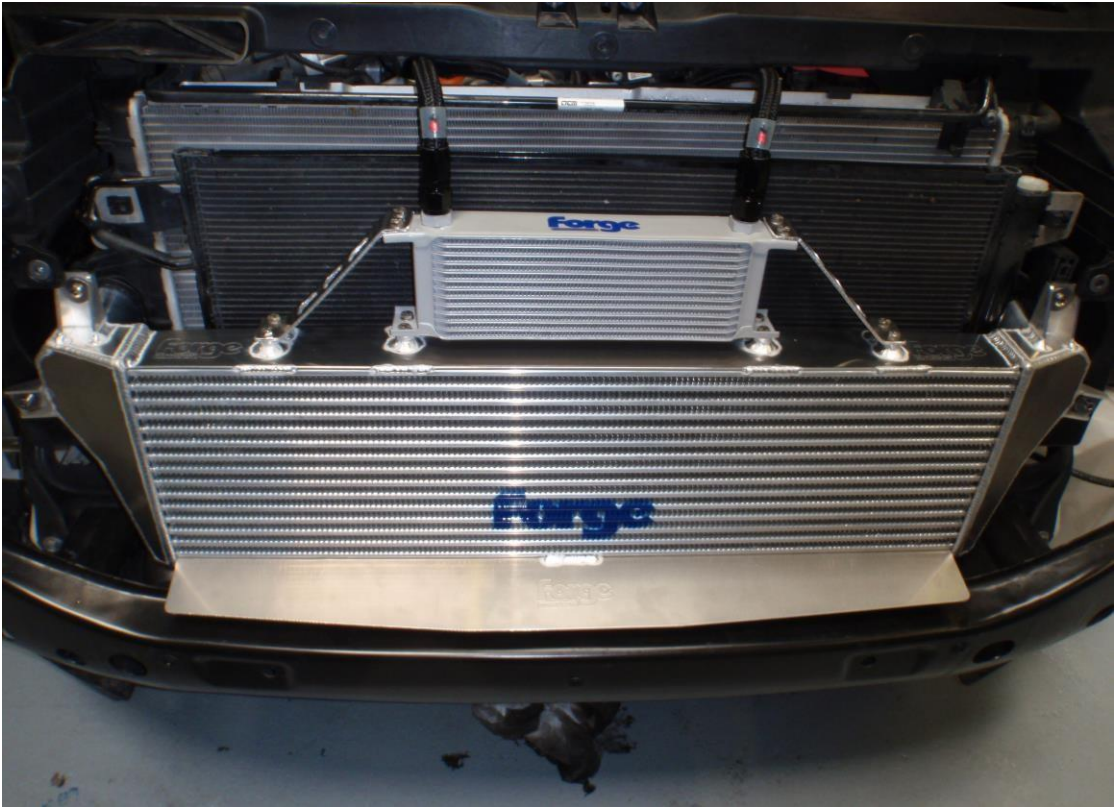

Engineered for performance.

