


Mounting kit includes:
3M tape, degreasing cloth, 2x M5 25mm screws, 4x M5 nut, 6x gasket.

1. Remove the original diffuser.
2. Drill holes in the bumper (picture 3,4)
We recommend using a 8-10mm drill bit.


3. Check the fitment of the part with the bumper.
Screws should enter freely into the holes.

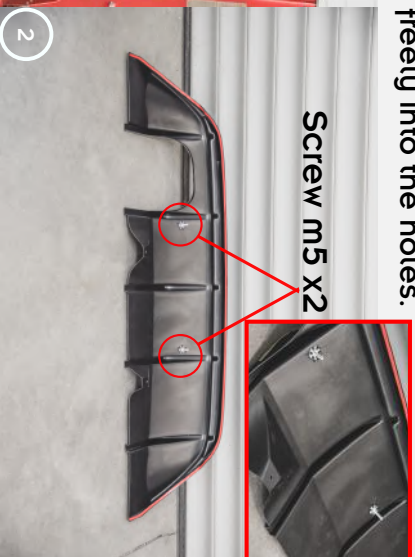

Mounting kit includes:
3M tape, degreasing cloth, 2x M5 25mm screws, 4x M5 nut, 6x gasket.

1. Remove the original diffuser.
2. Drill holes in the bumper (picture 3,4)
We recommend using a 8-10mm drill bit.

3. Check the fitment of the part with the bumper.
Screws should enter freely into the holes.

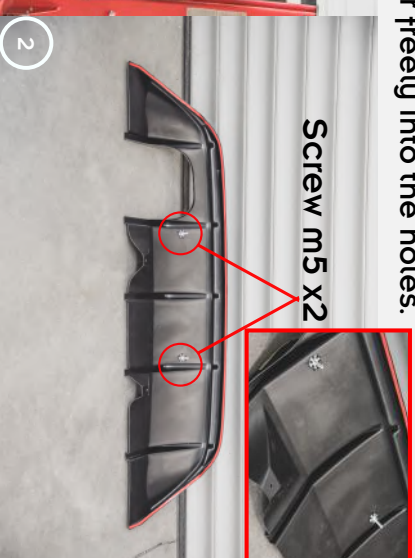

4. Use the degreasing cloth provided to clean the contact surfaces of the tape with the bumper.

5. Place the part into the bumper applying pressure, so the tape stick properly.

6. Drill holes as shown in pictures 5 and 7 (left and right side).

4. Use the degreasing cloth provided to clean the contact surfaces of the tape with the bumper.

5. Place the part into the bumper applying pressure, so the tape stick properly.

6. Drill holes as shown in pictures 5 and 7 (left and right side).

7. Use included hardware to secure the part to the bumper.







Optional mounting method with the use of ABS angles supplied in the mounting kit, if you have a different bumper than shown in picture 3.

7. Use included hardware to secure the part to the bumper.



Optional mounting method with the use of ABS angles supplied in the mounting kit, if you have a different bumper than shown in picture 3.

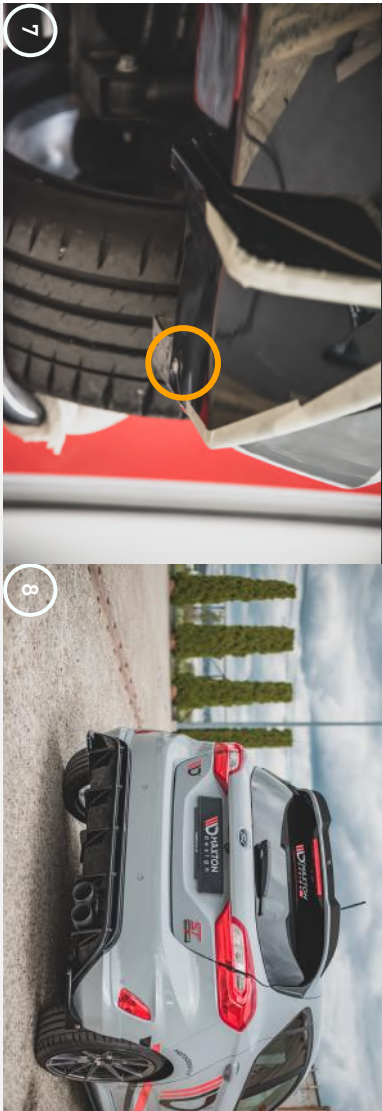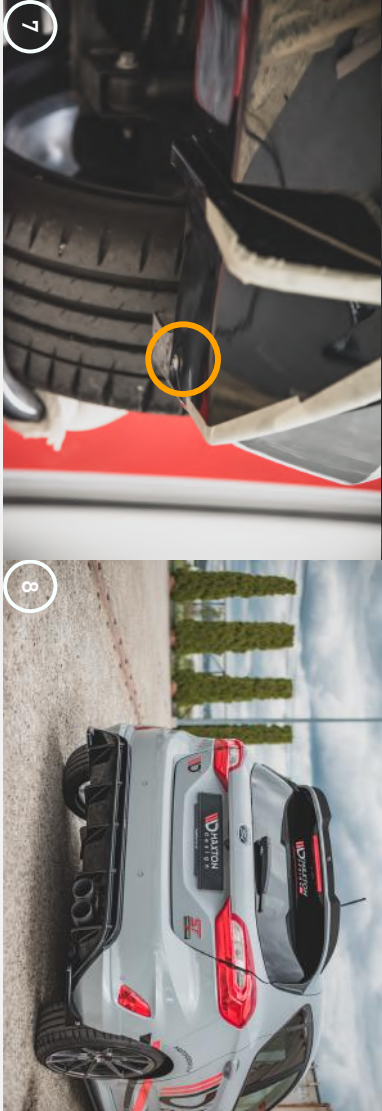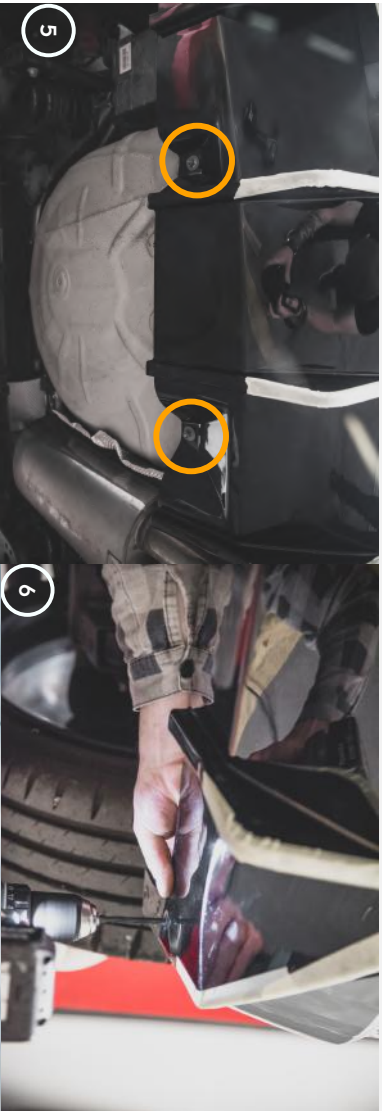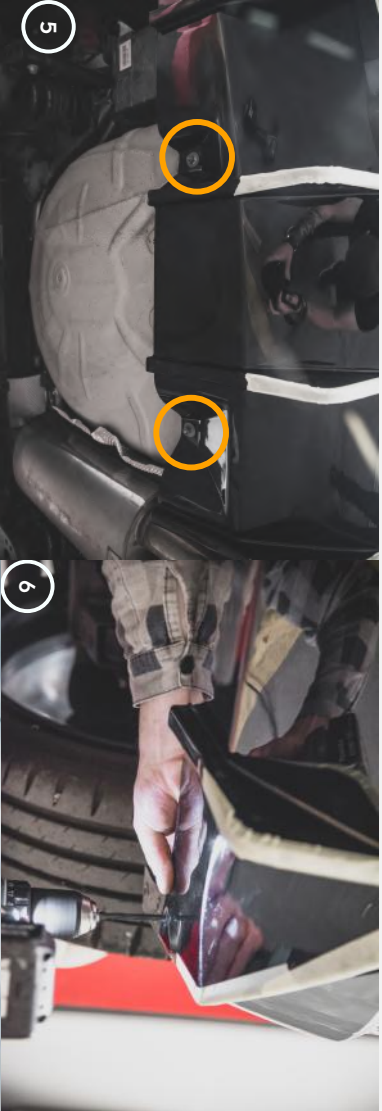

8. Enjoy the properly mounted rear valance from MaxtonDesign.

8. Enjoy the properly mounted rear valance from MaxtonDesign.

